# GT3 PLUS

# Endodontic Handpiece (GT)

# **USER MANUAL**



# **USER MANUAL**

#### ▲ Read Instruction Before Use

# **SECTION 1: General Introduction**

Cordless Endo Motor GT3 is a kind of endodontic micromotor to operate NI-Ti files, and it helps dentists to shape standard root canal following the treatment of root canal based on micro-electronic control technology. It will help the treatment of dentists.

#### Product application and intended use

Endo Motor GT3 is applied to endodontic treatment. It is used for treating the root canal pulp necrosis, chronic pulpitis, chronic apical periodontitis (including meat tooth apical swelling, periapical abscess, periapical cyst), periodontal pulp syndrome and systemic diseases should not be extract but urgent needed to be treat.

#### **Unique advantages**

Use Endo rotary file to enlarge the root canal, not only enlarges the root canal in straight situation, but also works for curved root canals.

- 1. It was designed based on ergonomic science. Also it was designed to reduce user's tiredness by placing the motor at the center of mass.
- 2. 4 different program which can be preset & memorized.
- 3. Auto-reverse and auto-stop function: When torque exceeds the limit, the file automatically reverse or stop.
- 4. Contra angle can be 135°C autoclaved.
- 5. Build-in rechargeable battery, greatly resolved the inconvenience of frequently replace the battery. In order to protect the life-span and working life of the battery, the machine will turn off automatically in 5 minutes without use.
- 6. If low battery, the machine will alarm to indicate operator.

# **SECTION 2: MAIN TECHNICAL INDEX**

### Model : GT3

- Type of protection against electric shock : Class II equipment:  $\Box$
- Degree of protection against electric shock : Type B applied part:  ${
  m \star}$
- Degree of protection against ingress of water: IPX0
- Operation mode : Continuous Operation

#### **Product Specification**

- (1) Motor Handpiece
  - Battery type : lithium-ion battery
  - Input Voltage : 3.7V dc
  - Rated Capacity : 700 mAH
  - Size : 25 (width) X 27 (length) X 137mm (height)
  - Net weight : 143g (head: 37g, main unit:104g, LED:2g)
- (2) Charging base
  - Size : 120 (width) X 80 (length) X 60 mm (height)
  - Net weight : 73g
- (3) Adaptor
  - Rated input voltage : AC 100-240V 50HZ/60HZ
  - Output voltage : DC 5V
  - Output current : 1.2A

# **SECTION 3: Symbol**

The following symbols may appear in this manual or on its accessories. Some of the symbols represent standards and compliances associated with endo motor and its use.

i	Consult accompanying documents
$\land$	Cautions
EC REP	Authorized Representative in the European Community
<b>CE</b> 0123	CE Mark: conforms to essential requirements of the Medical Device Directive 93/42/EEC.
	Date of manufacture.
	Manufacturer
SN	Specifies serial number
Ŕ	Type B applied part
	Refer to instruction manual / booklet
$\square$	The device should not be used after the end of the shown or the day
X	DISPOSAL: Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.
((())	alert indicator displayed on the LCD screen
	Battery power sign displayed on the LCD screen
CAک ک	AUTO REVERSE: If the load is removed after auto reverse rotation, it returns to the normal rotation again.
Aک	AUTO STOP: If the load is removed after auto reverse rotations, it stops.
2	AUTO REVERSE OFF: Auto reverse function is not activated.

# **SECTION 4: Product Structure**



# **SECTION 5: Operation Panel and LCD Screen**



#### **OPERATION PANEL**



Holding down the POWER key for more than one second to turn on the power. Holding down the POWER key for more than one second while the power is on to turn off the power

# **ON/OFF**

When the power is on, press ON/OFF key and the device start rotation, press this key again and the device stop rotation.

# SELECT (S

To change Torque (TQ), Gear Ratio (GR), Speed (SP) and Auto reserve setting. The speed and torque can be changed while the file is in motion.

# PROGRAM (memorize)

Holding down the PROGRAM key for more than one second choose program.

The following parameters can be set. (Torque, Gear Ratio, Speed and Auto reserve.)



To adjust the set value for each parameter Speed: rpm, Torque: N.CM

Speed (rpm)	Gear ratio	Torque (N.CM)
100-450	20:1	0.3~5.0

# LCD PANEL

**UP/DOWN** 



# **AUTO REVERSE**

The present auto reverse mode mark is displayed.

**CAUTO** REVERSING (If the load is removed after auto reverse rotation, it returns to the normal rotation again.)

A 2: AUTO STOP (If the load is removed after auto reverse rotations, it stops..

L: AUTO REVERSE OFF: Auto reverse function is not activated.

# **BATTERY REMAINING**

The mark of the present remaining amount of the batteries is displayed.



:Means full charge

:Means approx. 30-80% remains

:Means less than 30%

: Means low voltage. Charge immediately

# PROGRAM



# Initialization of Program (Factory-set configuration)

The program can be reset to the original state Factory-set configuration

1	Turn on the power when the power is off.		
2	Connect handpiece contra angle		
3	Hold down the SELECT key (S) and Program key (P) more than five seconds.		
4	The LCD panel indicates "CAL"		
5	Press ON/OFF key		
6	Initialization is completed, when LCD panel display normally		

# **SECTION 6: OPERATION**

#### 1. Charge

A. Connect the power adaptor to the charging base.

B. Put the main unit on the charging base, during this period, please confirm if a beep is heard and the power display is flashing.

C. If the beep has been heard, and the Power display shows "FUL", means the battery is full.

D. During charging, the Power display shows "CHG".



2. Contra angle install and uninstall

Connect the contra angle and main unit, please target the hole of main unit and contra angle until a sound can be heard. When uninstall the contra angle, please pull out in vertical direction.

#### 3. The install and uninstall of bur

Insert the bur inside the contra angle and rotate lightly to find the right position, and then insert until a sound can be heard. When uninstall the bur, just press the push-button of contra angle to uninstall.

While uninstall the bur, please turn off the power.

# While install the bur, please double confirm the bur has been successfully loaded.

Please keep the bur clean, dirty bur can cause a problem during operation.

#### 4. Operation

Press the Power button to start the machine, press the engine on/off button to start the rotation, press again the engine on/off button to stop the rotation.

#### 5. After the operation

Please press the power button to turn off the machine after the operation.

Auto turn off function

The machine will be automatically turned off after 5 minutes not using.

# **SECTION 7: NOTICE**

**Note**: Please do not use improper bur because it will cause problems during operation.

Please use the right speed according to the bur manufacturer.

Please avoid putting the machine under high temperature such as sun light or fire.

While inserting the machine to the charging base, please make sure to put in the correct position in order to avoid break.

# Please do not lubricate our Endo motor main unit & charging base. Please do not autoclave our Endo motor main unit & charging base.

The endo motor is not water-proof, please keep it away from water or chemical liquid in order to avoid short-circuit.

Please do not fall down the main unit and charging base.

Please use our power adaptor to charge the machine.

Our Endo motor usually will not make electromagnetic interference to other equipment

#### Forbidden.

This product cannot be used to cardiac pacemaker patients.

Do not use with high-frequency surgical equipment and heart disease patients!

# **SECTION 8: troubleshooting guide**

When trouble is found, check the following again before contacting your dealer.

Problems	Cause & Solution
The power is not	The battery is empty.
turned on	• Charge the battery.
	The press time of the power button is short.
	<ul> <li>Please press the power button long enough</li> </ul>
	The POWER button is broken.
	Contact your dealer.
	The adaptor didn't connect well.
	• Please recheck the connection.
The battery can't be	The main unit is not put on the charger base correctly.
charged.	• Please place the main unit properly.
	The battery is out of order.
	Contact your dealer.
	The battery is empty.
The LCD isn't turned	Charge the battery
on.	The battery is not installed correctly.
	Contact your dealer.
There is heating on the	The connection part between the hand piece and
connection part	charging base is polluted.
between hand piece	Clean the connection part.
and charging base.	• If it isn't solved, then contact your dealer.
The file equipped with	The file isn't mounted to the handpiece correctly.
The file equipped with	<ul> <li>Mount the file with the hand piece properly.</li> </ul>
the hand piece doesn't	Inner cartridge, middle gear and the central part of
rotate or its power of	motor are broken
rotation becomes weak.	• Contact your dealer.
Auto-reverse function	The battery is very low.
doesn't work.	• Charge the battery again.



# **SECTION 9: MAINTENANCE**

- 1) Please recharge the battery for 60 minutes each month and double-check every function whether it is OK.
- 2) When the surface of main body is polluted, please rub the surface with dry soft cloth ONLY by using neutral cleanser.

# **SECTION 10: Sterilization and lubrication**

Please autoclave contra angle only.

Before autoclaving contra angle, please use spray to lubricate the contra angle. We suggest use 135°C autoclave for 15 minutes. 121°C autoclave for 20 minutes. The cleaned contra angle not in use, please seal in the sterilization bags and store it in a clean place

**Remarks:** The local temperature of bottom area is very high, so put the vessel in the middle or upper part of the disinfection cabinet

#### <IMPORTANT> - HOW TO LUBRICATE





1) uninstall head and whole unit



2) Spray



3) uninstall head

4) Remove oil completely by using tissue or gauze and install them again

If you install them without removing oil completely, the motor would be broken caused by oil

contamination to the motor.

# SECTION 11: ENVIRONMENTAL REQUIREMENTS

#### **OPERATING CONDITIONS**

- Ambient temperature : +5°C ~ +40°C
- Relative humidity range : ≤80%
- Atmospheric pressure : 50kPa ~ 106kPa

#### STORAGE AND SHIPPING CONDITIONS

- Ambient temperature : -10°C ~ +50°C
- Relative humidity range : ≤80%
- Atmospheric pressure : 50kPa ~ 106kPa
- -

Equipment is not suitable for storage in the presence of sunlight, rain, dust, and corrosive gasoline and volatile without poor ventilation.

# **SECTION 12: Packing List**



	product	quantity
1	Charging base	1рс
2	Adaptor	1рс
3	Main body	1рс
4	Contra angle	1рс
5	LED	1рс
6	User manual	1рс

# **SECTION 13: WARRANTY STATEMENT**

This instrument described below has been fully inspected and confronts to the current products specification..

The device is maintained free of charge and doesn't require any routine maintenance within warranty period, a year.

Products warranty or service will not be extended

- (1) Product is repaired, modified, misused, disassembled, or using the parts are not provided by the manufacturer.
- (2) The serial number of the product is defaced or missing.
- (3) Damaged from incorrect use by user

If you need After Service, contact to dealer that you buy from. Don't modify or uninstall the motor.

- This product should be repaired by the expert who is approved.

- This product should be used by a dentist.
- Electric supplying should be based on the standard of supplier or the requirements of the product.

# SECTION 14: PRODUCT DISPOSAL

- Even though the used battery can be recycled, the environmentally correct method for disposing of the used battery may vary between countries. It is recommended, therefore, to return the used battery to your local dealer.

Global Top Inc. Tel: +82 31 908 0222 / Fax: +82 31 908 0224